

# Parker IntraFlow<sup>™</sup> ISA/ANSI SP76.00.02

### **Compliant Modular Systems**

Catalog 4250 Revised, December 2003



### Parker IntraFlow™ Modular Systems

### Introduction to Serious Simplicity

Parker IntraFlow™ substrate fittings have been developed specifically for analytical, lab and other complex general purpose instrumentation flow control systems. ISA/ANSI SP76.00.02 compliant, Parker IntraFlow™ fittings provide maximum flexibility with minimal space requirements. All flowpaths, regardless of direction, are maintained on a single plane within the system as there are no lower level manifold blocks required. Contiguous fitting flow paths are intra-connected with slip fit pressure connectors, while a threaded pegboard provides connection force and rigidity when fittings are mounted with cap screws. System assembly couldn't be simpler: a 5/32" hex head wrench is all you need to build with Parker IntraFlow™.

### **Design Features**

- System size is reduced as much as 75% compared with conventionally plumbed systems, drastically reducing panel space, internal volume and purge times
- Compliant with ISA/ANSI SP76.00.02 open architecture standards
- Complex system assembly was never easier! No tube benders or cutters required, and no welding. All that's needed to assemble is a 5/32" hex head wrench!
- Every component on your Parker IntraFlow™ system can be reused when upgrading with emerging NeSSI Generation 2 & 3 technologies
- All flow paths are on the same plane: Parker IntraFlow™ eliminates lower level manifolds to minimize system weight and leak potentials
- Whether mounting a fitting to the standard 1/8" pegboard or a valve to the fitting, the same 10-32 x 1/2" SHCS is the only screw required

### **Specifications**

Pressure Rating:

Vacuum to 500 psig (34 bar) CWP

Temperature Ratings:

Fluorocarbon Rubber

-15°F to 400°F (-26°C to 204°C)

Buna-N Rubber

-30°F to 275°F (-34°C to 135°C)


Ethylene Propylene Rubber

-70°F to 275°F (-57°C to 135°C)

Neoprene Rubber

-45°F to 250°F (-43°C to 121°C)

Highly Fluorinated Fluorocarbon Rubber -25°F to 200°F (-32°C to 93°C)

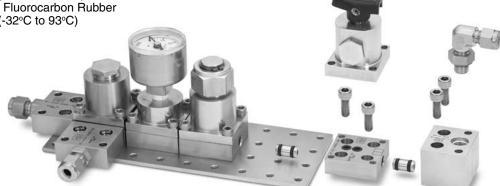

Patent Pending




### Parker IntraFlow™ Heated Systems

### **Heated Systems**

Conventionally fabricated heated systems typically utilize convection heaters inside an insulated enclosure. Parker IntraFlow™ systems deliver the heat through conduction directly where it's needed: within 5/32" of the actual fluid flowpath. Replacing the standard 1/8" thick pegboard with a 1/2" thick internally channeled plate, electric heat cartridges are easily inserted to heat fluid to desired temperatures. A steam heat ported pegboard is also available.

### **Design Features**

- Heated pegboard is interchangeable with non-heated pegboard and easily converted
- Heat is applied through conduction directly to the base of the fitting, increasing heat efficiency
- Commercially available standard general purpose heater cartridges insert and connect directly into the pegboard via 1/8" FNPT connections
- Class I, Division 2 compliant cartridges are available with direct connect conduit connections
- Parker Multitube<sup>®</sup> heat traced tube bundles are available for sample delivery to IntraFlow<sup>™</sup> systems. Multi-zone controllers are capable of integrating all control at one source
- Steam heat channeled pegboards are also available

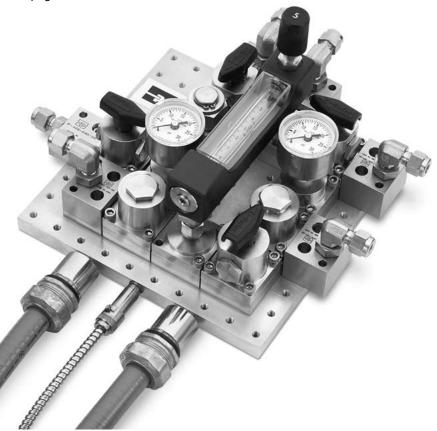

### **Electric Specifications**

- 120 or 240 VAC, 50/60 Hz
- 40, 50, 75 watt cartridges
- General purpose 1/4" nominal cartridge with 1/8" FNPT threaded connection

### **Steam Specifications**

- 1/8" FNPT supply and return connection ports
- 600 psig (41 bar) maximum steam pressure
- Maximum temperature capability determined by system o-ring selection

### /!\WARNING

FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

#### Offer of Sale

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale" located in Catalog 4110-U Needle Valves (U Series).

© Copyright 2003, Parker Hannifin Corporation. All Rights Reserved.





### **Parker IntraFlow™ Fittings**





All Parker IntraFlow™ fittings are permanently marked with the part number, flow schematic and material heat traceability code for easy identification during assembly and when servicing in the field. 1/8" diameter internal flow paths are precision machined at the intersections to minimize dead volume. Slip fit counterbores with a lead-in chamfer retain intra-connecting pressure connectors.


Interface o-rings supplied separately on page 6.












































**How To Order Parker IntraFlow™ Fittings** 

Example: IF-

T-A13B2-

SS

Product	Generic and Defined Flowpath	Material
IF	From Chart	SS - 316 Stainless Steel



### Field Connectors





Connecting Parker IntraFlow™ systems to pressure sources is simply accomplished with a field connector. Both top and end access connections are available in 1/8" FNPT, 1/4" SAE and 1/4" Inverted CPI™ & A-LOK®.

**End Access** 

Top Access

#### **How To Order Field Connectors**

#### **Example:**

IF-	2F-	TOP-	SS
Product	Field Connection	Access	Material
IF		TOP (access) END (access)	

### **Pressure Connectors**



Slip-fit Pressure Connectors provide flowpath intra-connectivity between Parker IntraFlow™ fittings. Pressure Connectors are fully assembled with AS568B standard size 2-008 o-rings and are available in both standard and jumper lengths (for systems with flow requirements between non-contiguous fittings). Orifice is 1/8" and various elastomers are available.

### **How To Order Pressure Connectors**

#### **Example:**

IF-	CONNECTOR-	V-		SS
Product	Component	Elastomer	Length	Material
IF	CONNECTOR	V - Fluorocarbon Rubber EPR - Ethylene Propylene Rubber BN - Buna-N Rubber NE - Neoprene Rubber KZ - Highly Fluorinated Fluorocarbon	Blank - Standard 1 - 1 Block Jumper	SS - 316 Stainless Steel

### **Mounting Screws**



Parker IntraFlow™ requires only a single size screw to assemble an entire system. 10-32 UNF x 1/2" SHCS kits are available in bag quantities of 100. Material is 18-8 Stainless Steel.

Part number: 10-32x1/2-SHC-SCREW-100.



### **Interface O-Rings**



AS568B standard 2-007 o-rings are placed in the counterbores of each Parker IntraFlow™ fitting, providing a seal with the mating surface mount component. Parker's inPHorm O-Ring Material Selection Software takes the guess work out of media compatibility with o-ring compounds. Elastomer compound recommendations are output from media descriptions (single & multiple components) and temperature inputs.

# **How To Order Interface O-Rings Example:**

IF-	ORING-	V-	250
Product	Component	Elastomer	Bag Quantity
IF	ORING	V - Fluorocarbon Rubber	50
		<b>EPR -</b> Ethylene Propylene Rubber	100
		<b>BN -</b> Buna-N Rubber	250
		<b>NE</b> - Neoprene Rubber	500
		<b>KZ</b> - Highly Fluorinated	10
		Fluorocarbon Rubber	25
			50
			100

### Pegboards & Brackets



A wide range of heated and non-heated pegboard sizes are available to build your Parker IntraFlow™ system. Odd shaped or overside pegboards can be created by overlapping IntraFlow™ fittings across 2 standard pegboards. Heated pegboards are machined from ASTM 6061 aluminum while non-heated pegboards are machined from ASTM 304 stainless steel. Stainless steel brackets (minimum of 4 recommended) bolted at pegboard corner locations elevate the system for mounting to a backplane. Heated pegboards have holes bored in the end of the plate for either electric heater cartridges, thermocouples or steam. In all cases, 1/8" FNPT threads provide the connection port.


### **How To Order Pegboards**

**Example:** 

IF-	PEGBRD-	6x10-	ELEC
Product	Component	Size (hole matrix)	Style
IF	PEGBOARD	2x2	Blank - Non-Heated
		2x4	
		2x6	
		6x10	Blank - Non-Heated
		8x8	ELEC - Cartridge Heated
		8x10	STM - Steam Heated
		8x14	
		10x10	
		12x12	

#### **Pegboard Mounting Bracket P/N's:**

IF-MTGBRKT (non-heated pegboard) IF-MTGBRKT-HEAT (heated pegboard) (includes screws; 9/32" through hole for mounting to backplane).

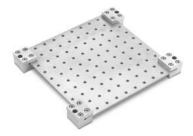





### **Adapters & Caps**



Surface mount adapters to common fitting connections are available for makeup to pressure indicators, thermocouples, sensors and other commercially available devices. Adapters are available in both 1 (-1P) or 2 (-2P) flow path configurations as shown in the drawings. Any of the -2P adapters may be plugged to provide a flow-through cap over an IntraFlow™ fitting planned for a future system function.

### **How To Order Adapters**

#### **Example:**




1 Port Adapter Connector



2 Port Adapter Connector

IF-	2F-	2P-	SS
Product	Connection	Ports	Material
IF	2A - 1/8" Inverted A-LOK® 2F - 1/8" FNPT 2Z - 1/8" Inverted CPI™ 4A - 1/4" Inverted A-LOK® 4F - 1/4" FNPT 4V - 1/4" Male VacuSeal 4V1 - 1/4" Female VacuSeal 4Z - 1/4" CPI™	1P - Single Port 2P - Double Port	SS - 316 Stainless Steel

### Rotometer Adapters



SP76.00.02 specifications require a 1.53" centerline spacing between all substrate fittings. Parker Rotometer adapters have 1/4" tube stubs machined 0.045" offset of the SP76.00.02 footprint to accommodate 4-1/2" rotometer port centerlines.

Part Number: IF-4TA-1P-OFFSET045-SS

### **Ball Valves**

#### Product: B Series Ball Valve Reference Catalog 4121-B



#### B2X Ball Valve

### **How To Order B Series Ball Valves**

#### **Example:**

IF-	B2L	J-	V-	SS
Port	Series	Seat	Seal	Material
IF	<b>B2L -</b> 2 way <b>B2X -</b> 3 way	J - PTFE J2 - PCTFE	V - Fluorocarbon Rubber EPR - Ethylene Propylene BN - Buna-N Rubber	SS - 316 Stainless Steel

#### Standard handle is black mini-lever. Other handle options:

**Colored Lever Handles:** Add the designator corresponding to the correct handle as a suffix to the part number: **W** — white, **B** — blue, **G** — green, **R** — red, **Y** — yellow **Example: IF-B2LJ-V-SS-G** 

**Colored Round Handles:** Add the designator corresponding to the correct handle as a suffix to the part number: **S** — black, **S-W** — white, **S-B** — blue, **S-G** — green, **S-R** — red, **S-Y** — yellow **Example: IF-B2LJ-V-SS-S-G** 



### **3-Way Air Actuated Valves**

Product: R-Max Air Actuated 3-way Valve Reference Catalog 4140-R




**How To Order R-Max 3-Way Valves Example:** 


IF-	HZS	K-	V-	99
Port	Series	Seat	Seal	Material
IF	R2S	K - PCTFE	V - Fluorocarbon Rubber BN - Buna-N Rubber EPR - Ethylene Propylene Rubber NE - Neoprene Rubber KZ - Highly Fluorinated Fluorocarbon	<b>SS -</b> 316 Stainless Steel

#### Regulator (45300792)

### **Inline & Fast Loop Filters**

Product: Inline Sintered Metal Filters Reference Catalog 4130-FT

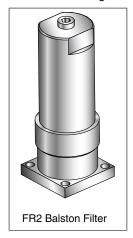



### **How To Order FT4 Inline Filters**

#### **Example:**

IF-	FT4-	10-	V-	SS
Port	Series	Seal	Filter Type	Material
IF	FT4	1 - 1μm 5 - 5μm 10 - 10μm 50 - 50μm 100 - 100μm 250 - 250μm 450 - 450μm	3	SS - 316 Stainless Steel

Product: Inline & Fast Bypass Filters

Reference Catalog IP-B


### **How To Order Inline & Bypass Filters**

**Example:** 

IF-	FR2-	V-	Р	93-		SS
				Eleme	nt Type	
Port	Series	Seal	Filter Type	Balston P & C	Sintered Metal	Material
IF	FR2 - Inline FR3 - Bypass	V - Fluorocarbon Rubber BN - Buna-N Rubber EPR - Ethylene Propylene Rubber NE - Neoprene Rubber KZ - Highly Fluorinated Fluorocarbon	P - Particulate C - Coalescing S - Sintered 316SS	93 - 93% Microfibre 99 - 99% Microfibre	1 - 1µm 5 - 5µm 10 - 10µm 50 - 50µm 100 - 100µm 250 - 250µm 450 - 450µm	SS - 316 Stainless Steel



Product: CO Series Check Valve Reference Catalog 4130-CO




# **How To Order CO Series Check Valves Example:**

IF-C04 SS Seal **Crack Pressure** Material **Port** Series IF CO4 1/3 psi V - Fluorocarbon Rubber **SS -** 316 BN - Buna-N Rubber 1 psi Stainless EPR - Ethylene Propylene Rubber 5 psi Steel 10 psi **KZ** - Highly Fluorinated Fluorocarbon 25 psi 50 psi 75 psi 100 psi

### **Needle Valves**

Product: H Series Needle Valve Reference Catalog 4190-HV

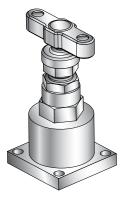


### How To Order H Series Needle Valves


**Example:** 

IF-	H4L	K-	V-	SS
Port	Series	Seat	Seal	Material
IF	H4	R - Blunt (30 deg) N - Needle (2-1/2 deg) K - PCTFE	Blank - PTFE BN - Buna-N Rubber EPR - Ethylene Propylene Rubber V - Fluorocarbon Rubber	SS - 316 Stainless Steel

Product: VQ Series Toggle Valve Reference Catalog 4110-VQ



Product: HR Series Metering Valve Reference Catalog 4170-HR

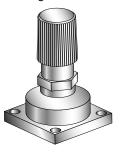

HR Metering Valve

# **How To Order VQ Series Toggle Valves Example:**

IF-	V4LQ	K-	V-	SS
Port	Series	Seat	Seal	Material
IF	V4LQ	Blank - PTFE K - PCTFE	Blank - PTFE BN - Buna-N Rubber EPR - Ethylene Propylene Rubber V - Fluorocarbon Rubber	<b>SS</b> - 316 Stainless Steel


# **How To Order HR Series Metering Valves Example:**

IF- H3	3L	V-	SS-	NS	
Port Ser	ries (Max	C <sub>v</sub> ) Seal	Material	Handle Type	
H2	1L .00 2L .01 3L .02 4L .03 5L .04	BN - Buna-N Rubber EPR - Ethylene Propylene Rubber KZ - Highly Fluorinated Fluorocarbon 00	<b>SS</b> - 316 Stainless Steel	K - Knurled TC - Turns Counter NS - No Handle (slotted stem)	



### **Relief Valves**

Product: RL4 Relief Valve Reference Catalog 4131-RL



**RL4** Relief Valve


#### **How To Order RL Series Relief Valves**

**Example:** 

IF-	RL4	V-	T-	SS-	MN-	KA
Port	Series	Seal	Backup Rings	Material	Actuation	Spring
IF	RL4	V - Fluorocarbon Rubber BN - Buna-N Rubber EPR - Ethylene Propylene Rubber KZ - Highly Fluorinated Fluorocarbon NE - Neoprene Rubber	<b>T -</b> PTFE	SS - 316 Stainless Steel	Override	<b>KA</b> - 10-25 psig <b>KB</b> - 25-50 psig <b>KC</b> - 50-100 psig <b>KD</b> - 100-150 psig <b>KE</b> - 150-225 psig <b>KF</b> - 10-225 psig <b>KG</b> - 225-400 psig

### **Quick Disconnects**

Product: FS Series Non-Spill Coupler Reference Catalog 4220-USA

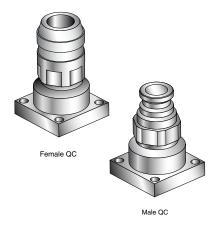


# **How To Order FS Series Non-Spill Couplers Example:**

IF-	FS-	251-	V-	SS-	1060
Port	Series	Seat	Seal	Material	Key/Color Code (Optional)
IF	FS	251 -	<b>V</b> - Fluorocarbon Rubber	<b>SS -</b> 316	(Blank) - Non-keyed/
		Coupler	BN - Buna-N Rubber	Stainless	color coded
		252 -	EPR - Ethylene Propylene Rubber	Steel	<b>Brown -</b> 1060
		Nipple	KZ - Highly Fluorinated Fluorocarbon		<b>Black -</b> 0045
			<b>NE -</b> Neoprene Rubber		<b>Red -</b> 2075
					<b>Orange -</b> 3090
					<b>Yellow -</b> 4105
					Green - 5120

### **Pressure Reducing Regulators**

Product: SMSQMICRO Reference Catalog 25000143

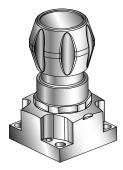

Regulator (45300792)

### **How To Order SMSQMICRO Regulators**

**Example:** 

SMSQMICRO	30	10	SS	RING
Port	<b>Outlet Pressure Range</b>	Flowpath	Optional Features	Suffix
SMSQMICRO	<b>30 -</b> 0-30 psig <b>60 -</b> 0-60 psig <b>HF30 -</b> 0-30 psig <b>HF60 -</b> 0-60 psig <b>130E30 -</b> 0-30 psig <b>130E60 -</b> 0-60 psig	10	(Blank): No Options SS: Stainless Steel Internals TH: Hastelloy C-22 Trim VESP: Vespel Seat	Ring




### **Diaphragm Valves**

Product: SM930 Reference Catalog 25000146

### How To Order SM930 Series Diaphragm Valves

Example:

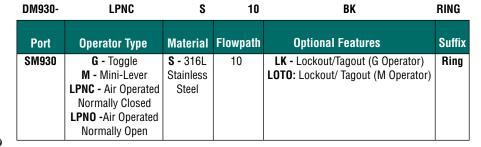





### Functional Systems

#### Basic Fast Loop System

Diaphragm-actuated (54012129)

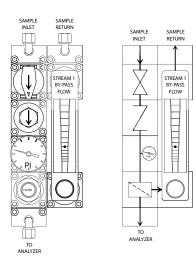

Parker IntraFlow™ systems are easily standardized to provide common functionality for analyzer sample systems. Standardized functions simplify field maintenance for technicians with "plug & play" system changeout. Parker design engineers have developed numerous standardized systems that are available factory built and tested. Custom designs are also available as kitted components, or factory assembled and tested units. Consult with your local Authorized Parker Instrumentation Distributor or contact the factory for more details.

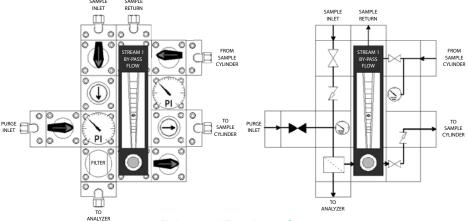

Enhanced Fast Loop System



